



INSTALLATION GUIDE

issue 11/16

pg 1/2

Advance - Carpet Tiles

For fiberglass reinforced PVC backed & Mix-Bac tiles

STEP 1


A pallet can carry up to 20 boxes. To prevent damage to the carpet tiles, 2 pallets should never be stacked on top of each other. There is a batch number on every box. Before laying, check that the tiles are from the same batch. It is important that batch numbers are not mixed within an installation in view of very slight colour variations which may occur from batch to batch.

STEP 2

To ensure optimal conditioning of tile backings, the temperature for fitting must be between 10°C and 25°C, at a relative air humidity of approximately 60%. The tiles should be removed from their outer boxes and laid loosely on the floor for 24 hours before laying so that they can become conditioned to room temperature guaranteeing stability.

STEP 3

There is an arrow on the back of each tile which indicates pile direction. If laid in a Monolithic (Broadloom) or Brick style, all the tiles should be laid with the arrows pointing in the same direction - see the diagrams on page 2. If laid Quarter turn (Checkerboard) style the arrows should be at 90 degrees to the adjacent tile – also see diagram on page 2. Start laying with a full tile laid at the door, continuing to the middle of the room in parallel with the main wall (see diagram below).

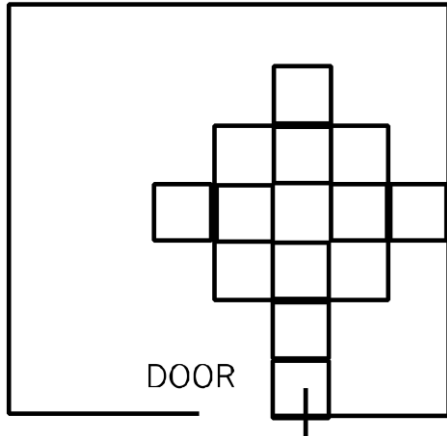

Make sure that no pile material is trapped between the tiles. This central point is a starting point for the gradual placement of the other pieces. It is necessary to apply good pressure when butting the tiles together for a neat fit.

(continued)



INSTALLATION GUIDE


Advance - Carpet Tiles

issue 11/16

pg 2/2

STEP 4


The tiles can be laid in different ways:

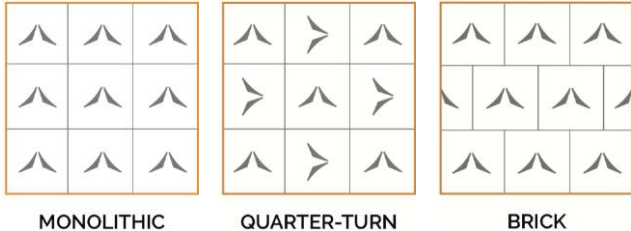

Installation of Carpet Tiles — Directional vs Quarter Turn, some patterns allow the carpet tiles to be laid either using a Directional method or by Quarter Turn method. Other patterns is such that they can only be laid "Quarter Turn" or in a "Random" manner. More information may be found on the relevant product data sheet on our website www.advanceflooringsystems.com or you can call us for further clarification if required.

STEP 5

Finally, finishing the edges:

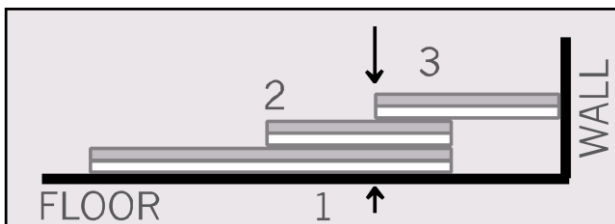

- Place the tile to be cut (2) on the tile laid last
- Slide a third tile (3) against the wall
- Cut the tile to be placed (2) along the edge of (3)
- Place the cut tile (2) against the wall

STEP 6

The tiles can be laid without adhesive, but in doorways and for offices and other heavy-wear installations we recommend the use of a tackifier adhesive. Regular vacuum-cleaning will help maintain the appearance of the tiles. Never use solvents (white spirits, petrol, etc.), as they can affect the colour.

Recommended Adhesive

Strongbond 65 – Look Floors, or Polymer 999 PS – Gilt Edge Industries Ltd.